



# 2011 Mazda6

## SMART START GUIDE



Optional equipment shown.



Advanced Key



Auxiliary Key



## ADVANCED KEYLESS ENTRY SYSTEM

- This system allows you to lock/unlock the doors, open the trunk lid and start the engine without taking the key out.

### While Carrying the Advanced Key...

- Unlock the driver's door** by gently grasping and pulling the door handle after the beep sound is heard. The sensor on the back side of the door handle will sense the motion of your hand and unlock the door.

**NOTE:** If the door handle is pulled too quickly (before door is unlocked), the door may not open. Pull the door handle again to open.

- Unlock all doors** by pushing the inner door lock switch after opening the driver's door.
- Unlock/Open the trunk** by pushing the trunk request switch while the shifter is in Park (A/T) or when the parking brake is applied (M/T).
- Lock all doors** by pushing the driver's door or passenger door request switch once.

**Genuine Mazda Accessory Remote Start is available at your Mazda Dealer.**

## KEYLESS ENTRY SYSTEM

This system remotely locks and unlocks the doors and the trunk.

### Release Button

 
- Push to extend key.
- Push & fold to retract key.

### Unlock

- Push once to unlock driver's doors.
- Push twice (within three seconds) to unlock all doors.


### Trunk


- Push and hold to open trunk.

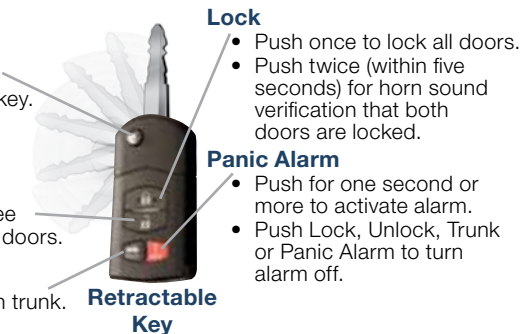

## STARTING THE ENGINE

### While Carrying the Advanced Key...

 - Start the engine** by pushing the START/STOP button, while pushing the clutch pedal (manual transmission) or the brake pedal (automatic transmission).
- Shut the engine OFF** by pushing the START/STOP button again.
- Activate Accessories (ACC)** by pushing the START/STOP button once without pushing the clutch or brake pedal.
- The key indicator light  will show **GREEN** when the advanced key is detected and the brake pedal is pushed. The engine is ready to start. The indicator flashes **RED** (for 3 seconds) when the key is not detected or if the advanced keyless transmitter battery is dead. If illuminated **RED**, the push button start may not start the engine, unless the auxiliary key is used.

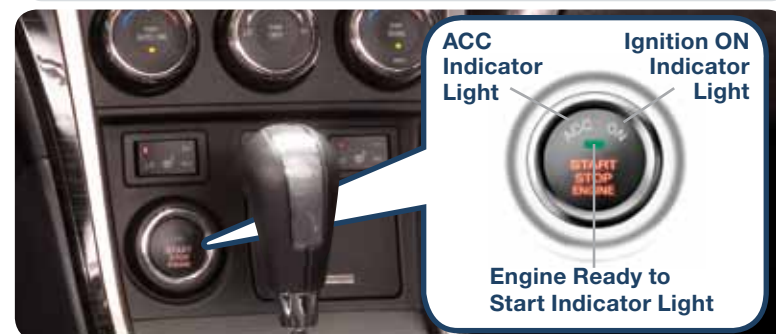

### NOTE:

- Engine Stop**  
Continuously pushing the START/STOP button while the engine is running will turn the engine OFF. Use only in case of an emergency.
- Vehicle Entry/Engine Start**  
If the advanced key cannot be used due to a malfunction or dead advanced key battery, use the auxiliary key to lock/unlock the doors and to start the engine.

### With the Auxiliary Key...

- To start engine, locate the key slot cover on the steering column and remove the cover.
- Insert the auxiliary key into the key slot, then push the START/STOP button with the clutch pedal (M/T) or the brake pedal (A/T) pushed down to start the engine.

Advanced Key (Rear)

Key Release

Auxiliary Key (for opening the doors and starting the engine)





## ELECTRONICALLY OPERATED DRIVER SEAT CONTROLS

### Slide/Tilt Switch

Seat can be moved back and forth, raised, lowered, or tilted with this control.

### Recline Switch

Push forward or backward to adjust seatback angle.

### Lumbar Adjustment

Rotate clockwise to increase support and counterclockwise to decrease support.



### Memory Seat Switch

### To Program the Driver's Seat Position

- 1 Park vehicle.
- 2 Adjust seat to desired position using the slide/tilt and recline switches.
- 3 While pushing the memory seat SET button, push one of the three programming buttons until a beep is heard. Programming is now complete. Program the remaining two buttons as desired.

**NOTE:** You can also program one seat position for each advanced key/retractable type key used with the vehicle. See Owner's Manual for programming instructions.

### To Move the Seat to a Programmed Position

- **With driver's door OPEN and ignition OFF**, push and release one of the programmed buttons (1, 2, or 3) when entering the vehicle.  
**OR**
- **With driver's door CLOSED and ignition ON**, push and hold one of the programmed buttons (1, 2, or 3).

**NOTE:** Memory seat functions DO NOT operate when driver's door is OPEN and ignition is ON, when driver's door is CLOSED and ignition is OFF, or when the vehicle is in motion.

## Fuel Door Release

(located on floor next to driver's seat)

To open, pull the remote fuel door release.

**NOTE:** Fuel requirement 87 Octane.



## Fuel Door

To avoid scratching the paint during refueling, secure the fuel filler cap tether over the hook as shown.



**Genuine Mazda Accessory Chrome or Pearl Satin Finish Fuel Filler doors are available at your Mazda dealer.**



## ALUMINUM WHEEL CARE

Your aluminum wheels have a protective coating on them. Only use a mild soap or neutral detergent with a sponge or soft cloth to clean them. Using a wire brush, polishing compound, solvent, or any type of abrasive cleaner may damage the protective coating.



**Genuine Mazda Accessory Wheel Locks are available at your Mazda dealer.**





**LIGHTING/TURN SIGNALS**  
(P. 9)


**WIPER/WASHER**   
(P. 10)

**INFORMATION DISPLAY**  
(P. 14, 16)

**HAZARD WARNING**

**AUDIO SYSTEM WITHOUT NAVIGATION**  
(PP. 17-18)

**AUDIO SYSTEM WITHOUT NAVIGATION**  
(PP. 19-20)

**AUDIO SYSTEM WITH NAVIGATION**   
(PP. 21-24)

  
**PASS AIRBAG OFF**

**PASSENGER AIRBAG OFF INDICATOR<sup>1</sup>**

**HEADLIGHT LEVELING**  
(P. 9)

**BSM OFF**   
Blind Spot Monitoring  
(P. 13)

**TRUNK RELEASE**

**INFO BUTTON**

**TCS/DSC OFF**  
Traction Control System  
Dynamic Stability Control

**TILT/TELESCOPIC STEERING WHEEL LEVER**

**BLUETOOTH® HANDS-FREE/AUDIO** (P. 25)

**CRUISE CONTROL/BLUETOOTH®**

**CLOCK**  
(P. 17)

**CLIMATE CONTROL**   
(PP. 15-16)

<sup>1</sup>   
**PASS AIRBAG OFF**

This indicator light illuminates to remind you that the front passenger's front/side airbags and seat belt pretensioner will not deploy during a collision. The reason for this is that the weight in the seat is less than approximately 66 lbs. Always wear your seat belt and secure children in the rear seats in appropriate child restraints. See the Owner's Manual for important information on this safety feature.













The instrument cluster has a dimmer function that can be cancelled to make the illumination brighter during the day when the headlights are on. If the illumination is too dim during the day, press the knob, or if the illumination does not dim when turning on the headlights at night, press the knob. When dimmed, rotate the knob to adjust the brightness of the illumination.


















INSTRUMENT CLUSTER DIMMER<sup>1</sup> FUEL GAUGE TACHOMETER AMBIENT TEMPERATURE<sup>2</sup> ODOMETER/TRIP METER SHIFT LEVER POSITION INDICATOR SPEEDOMETER ENGINE COOLANT TEMPERATURE GAUGE TRIP METER SELECTOR<sup>2,3</sup>

## GLOSSARY OF WARNING AND INDICATOR LIGHTS

**NOTE:** See Owner's Manual for more details and explanations.

-  **Low Fuel Level**
-  **TCS OFF (Traction Control System)**
-  **KEY Warning RED**  
Advanced key not detected or advanced key battery is dead.
-  **KEY Detected (engine ready to start) GREEN**  
On: Advanced key detected; engine is ready to start.  
Flashing: Advanced key battery is low.
-  **Check Fuel Cap**
-  **Electronic Steering Lock**
-  **Lights On (Exterior)**
-  **Tire Pressure Monitoring System (TPMS) Warning Light**  
On/Warning Beep: Low tire pressure in one or more tires.  
Flashing: TPMS Malfunction
-  **BSM OFF (Blind Spot Monitoring)**
-  **DSC OFF (Dynamic Stability Control)**
-  **Charging System Malfunction**
-  **Powertrain Malfunction/Reduced Power**

-  **ABS (Antilock Brake System) Malfunction**
-  **Check Engine Light**
-  **Brake Warning Light**  
Parking brake on/low brake fluid/malfunction
-  **Turn Signal/Hazard Warning Indicator Lights**
-  **Automatic Transmission Malfunction**
-  **Headlight High Beams On**
-  **Traction Control System (TCS)/Dynamic Stability Control (DSC)**  
On: TCS/DSC malfunction  
Flashing: TCS/DSC operating
-  **Shift Lever Position Indicator**
-  **Airbag/Front Seat Belt Pretensioner System Malfunction**
-  **Low Engine Oil Pressure**
-  **Security Indicator Light**
-  **Door-Ajar**
-  **Seat Belt Unbuckled/Malfunction**
-  **Cruise Main Indicator Light On (AMBER)/Cruise Set Indicator Light On (GREEN)**
-  **Low Washer Fluid Level**


**NOTE:** Low ambient temperature and/or high altitude causes tire pressures to drop and may turn the TPMS warning light on. If the warning light comes on, check the tire pressure and fill the tires as soon as possible, preferably before moving the vehicle and warming up the tires. Tire pressure should be checked when the tires are cold.

<sup>1</sup> Rotate the knob to adjust the brightness of the instrument cluster and other dashboard illuminations.


<sup>2</sup> To change ambient temperature between Celsius and Fahrenheit, push trip meter selector twice from Trip A (or once from Trip B) to change to Temperature Mode. Push and hold trip meter selector for 1 second until temperature reading begins flashing and the change occurs. To return back to Trip Mode, push trip meter selector once (or wait 3 seconds after releasing trip meter selector or turn ignition off).

 
<sup>3</sup> Push to toggle between trip meter (A & B). When a trip meter is selected, push and hold to reset to zero miles.


## LIGHTING CONTROL/TURN SIGNAL LEVER

: Turns tail, parking, and dashboard lights on.

**AUTO:** The light sensor automatically determines when to turn the headlights on or off.

: Turns fog lights on only when headlights are on.

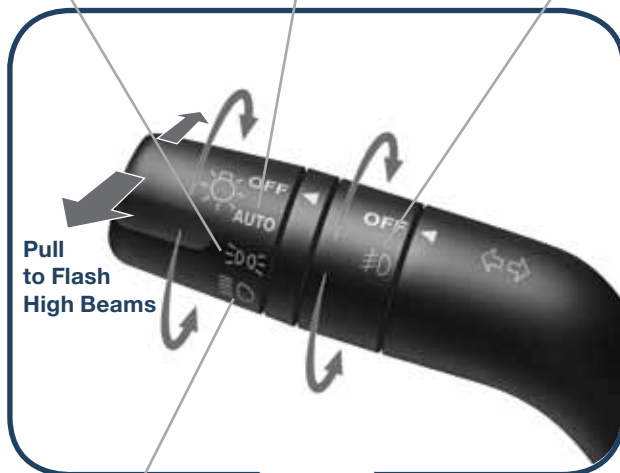

: Turns tail, parking, dashboard, and headlights on.


## HEADLIGHT LEVELING

 Adjust headlight angle with headlight leveling switch depending on vehicle passengers & load (example: Driver only = 0, Driver + Passengers = 1 or 2, etc. ). Refer to your Owner's Manual for complete details.



## WINDSHIELD WIPER/WASHER CONTROL LEVER

**AUTO:** The rain sensor senses the amount of rainfall and turns the wipers on or off. Rotate inner ring away from you (clockwise) for less sensitivity (requires more rain to turn wipers on) and towards you (counterclockwise) for more sensitivity (requires less rain to turn wipers on).

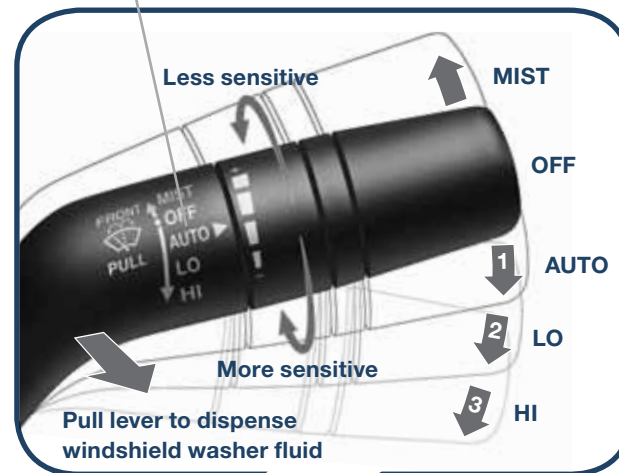

**NOTE:** Vehicles not equipped with AUTO wipers will have INT wipers. Set the lever to INT and choose an interval timing by rotating the ring between fast and slow.

**CAUTION:** When the ignition is ON turn the AUTO wipers OFF when going through a car wash, or while cleaning or touching the windshield.





## SPORT A/T MANUAL SHIFT MODE

The Sport A/T Manual Shift Mode gives you the feel of driving a manual transmission by allowing you to manually shift to control engine rpm and torque when more control is desired.

### To Use Manual Shift Mode:

- Shift lever from D to M.

 
**NOTE:** Changing to manual mode can be done while driving the vehicle.

### To Shift Up To A Higher Gear:

- Tap shift lever back (+) once.

### To Shift Down To A Lower Gear:


- Tap shift lever forward (-) once.

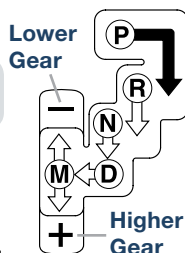

The transmission will automatically adjust how and when it shifts gears based on road conditions and your driving style. The transmission may stay in a lower gear longer than usual when going up or down hills or driving around corners. This feature gives you better control and a more connected driving experience.

## 6-SPEED MANUAL TRANSMISSION

 
- Push the clutch pedal down completely to start the engine and to shift gears.
- To place the transmission in Reverse, place shifter in the neutral position, push the shifter down, move to the left and push forward.

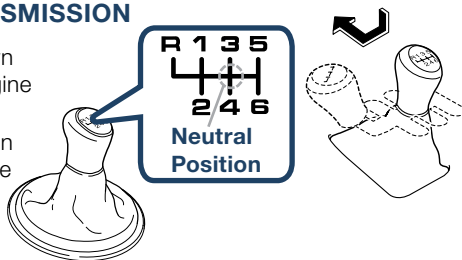

## REAR MOUNT CAMERA\*


Placing the gearshift lever into Reverse automatically operates the rear view camera and is viewable in the rear view mirror, or audio unit with display, or navigation display (as equipped).

 **NOTE:** When using the rear view camera, please check your surroundings as objects may be closer than they appear.

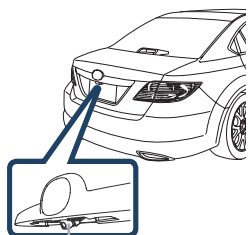

Rear Mount Camera

## AUTO-DIMMING MIRRORS AND HOMELINK®

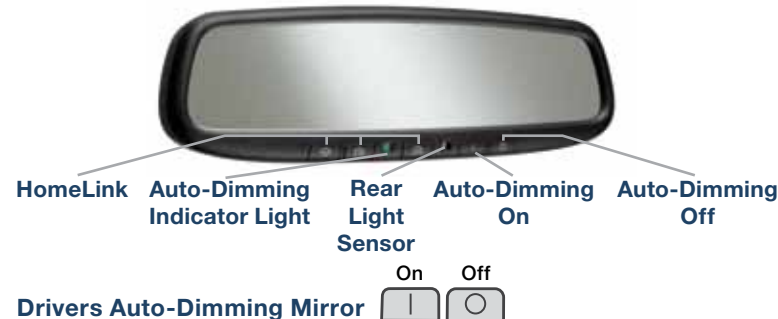 

### Drivers Auto-Dimming Mirror



- Auto-dimming automatically darkens your rearview mirror and driver side door mirror to reduce headlight glare from the vehicles behind you.
- Auto-dimming is activated every time the vehicle is started.

### NOTE:

 
- The driver side door mirror will appear to have a halo, or ring, around the outer edge of the mirror surface. This is actually the electrical circuitry that allows the mirror to dim. This is normal operation of the mirror.
- In addition to the auto-dimming mirror's rear light sensor, there is also a front light sensor (not shown). Do not place or hang any objects over the front or rear mirror light sensors; otherwise, the auto-dimming mirrors will not operate properly.

### HomeLink®



- This feature provides a convenient way to replace up to three transmitters such as garage door openers, home lighting remotes and other radio frequency devices.
- Refer to your Owner's Manual for complete programming details.

**Genuine Mazda Accessory Auto-Dimming Rearview Mirror with Compass and HomeLink® is available at your Mazda dealer if your vehicle is not equipped with system.**

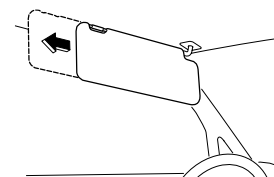

## SIDE EXTENSION SUNVISORS

The visor extender extends the sunvisor's range of sun shading.

To use, pull it out.

## BLIND SPOT MONITORING (BSM) SYSTEM

 
**The Blind Spot Monitoring (BSM) system is designed to assist the driver by monitoring the blind spots to the rear of the vehicle on both sides.**

- If your vehicle speed is 20 mph (32 km/h) or more, the BSM will warn you of vehicles in the detection area by illuminating the BSM warning lights located on the left and right door mirrors.
- If you operate a turn signal in the direction of an illuminated BSM warning light, the system will also warn you with a beep and warning light flash.
- BSM sensors are located under the left and right rear bumper areas. The BSM system may not operate properly if the rear bumper gets too dirty, so keep the rear bumper area clean.

Please refer to your Owner's Manual for complete details.

### Turning BSM System Off

To manually turn the BSM system off, push the BSM OFF switch on the dash. The BSM OFF indicator will illuminate in the instrument cluster when the BSM system is off. The BSM system will automatically turn on the next time the vehicle is started.

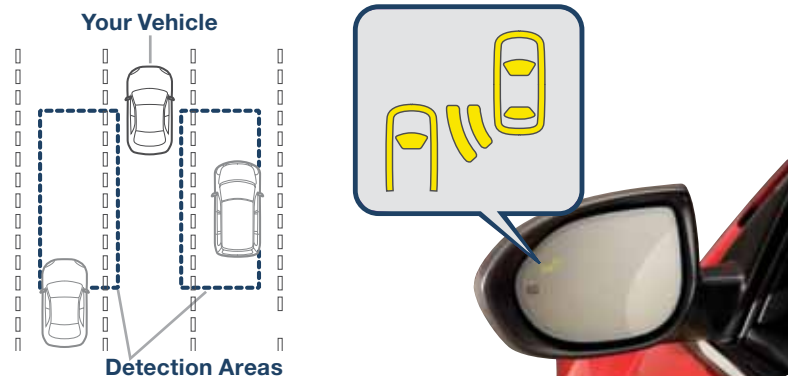

**NOTE: Do not rely completely on the BSM system and be sure to look over your shoulder before changing lanes:**

- The BSM system can assist the driver in confirming the safety of the surroundings, but is not a complete substitute.
- The driver is responsible for ensuring safe lane changes and other maneuvers.
- Always pay attention to the direction in which the vehicle is traveling and the vehicle's surroundings.
- The BSM system does not operate when the vehicle speed is lower than about 20 mph (32 km/h).

## PORTABLE AUDIO PLAYER INTEGRATION USING THE AUX JACK

Your vehicle is equipped with an AUX or auxiliary jack that will allow you to play your portable audio player through the vehicle's audio system. Learn the system when parked and do not let it distract you while driving.

**NOTE:** Available at your Mazda dealer is the Genuine Mazda Accessory 3.5 mm audio cable which can be used to connect your portable audio player into the aux jack.

 


- 1 Locate the AUX jack inside the center console.
- 2 Plug 3.5 mm audio cable into the portable audio player and into the AUX jack. Turn portable audio player on.
- 3 Turn the vehicle audio system on.
- 4 • **Without Navigation System:** Push AUX (or CD/AUX) button on audio system **OR** push MODE button on steering wheel controls until "AUX" is displayed.  
• **With Navigation System:** Push SOURCE button on audio system, then push AUX1 on screen **OR** push MODE button on steering wheel controls until "AUX1" is displayed.
- 5 Use the portable audio player controls to play music.


**IMPORTANT:** Set the volume level on your portable audio player to the highest level before distortion starts, then adjust the volume on the audio system.

## INFORMATION DISPLAY

### With multi-information display

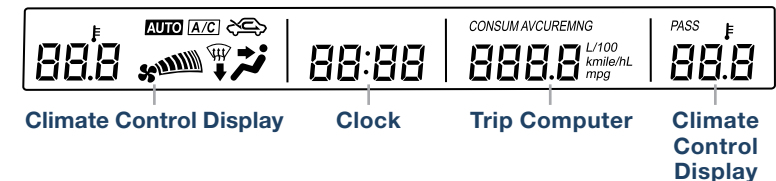

### Without multi-information display

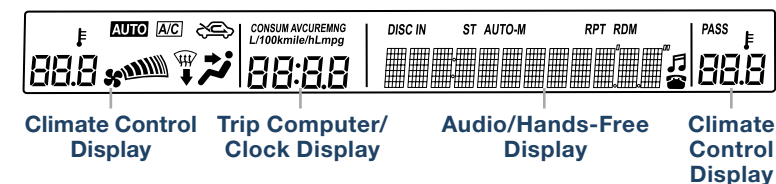 

**NOTE:** Information display contents vary depending on vehicle grade.



# Manual Climate Control

# Automatic Climate Control



## Temperature Control Dial

**A/C** Push to manually turn air conditioning on or off.

- Rotate the dial for temperature control.

**NOTE:** When set to MAX A/C with dashboard vents or dashboard and floor vents, the A/C will turn on, and recirculated air will be selected for maximum cooling.

## Fan Control Dial

- Rotate the dial to set desired fan speed (1-4).
- Push to recirculate cabin air to reduce outside odors and improve cooling (indicator on) or receive fresh air (indicator off).

**NOTE:** With or on, the system turns on the A/C and selects the fresh air mode for defroster.

## Mode Selector Dial

- Rotate the dial to select airflow mode.

- Dashboard vents
- Dashboard and floor vents
- Floor vents
- Defroster and floor vents
- Windshield Defroster
- Push to defrost rear window

## Best Cooling Settings



## Best Heating Settings



## Driver side temperature setting

## Passenger side temperature setting

## Driver Temperature Control Dial

**AUTO ON:** Push dial to turn Automatic Air Conditioning system on. Rotate dial to select your desired set temperature (shown in Information Display above). The airflow mode and the amount of airflow will be automatically controlled in accordance with the set temperature.

FRONT Push to defrost windshield.

REAR Push to defrost rear window.

**NOTE:** The automatic temperature control always works, even if the AUTO ON indicator light goes off after rotating the Fan Control Dial or changing the vent mode.

## Fan Control Dial

- Push OFF to turn climate control system off.
- Rotate the dial to select the desired fan speed.
- Push to recirculate cabin air to reduce outside odors and improve cooling.
- Push for fresh air circulation.

**NOTE:** Automatic climate control will allow you to maintain individual preset cabin temperatures for the driver and passenger when DUAL mode is selected.

## Passenger Temperature Control Dial

- Push to turn DUAL mode on or off.
- With DUAL mode ON** (indicator on), rotate the dial to set passenger side temperature separate from the driver's side (shown in the Information display above).
- With DUAL mode OFF** (indicator off), driver controls the temperature setting on both sides.

**MODE** Push to select airflow mode.

**A/C** Push to manually turn air conditioning on or off.

## SETTING YOUR CLOCK

(not equipped with Trip Computer)

1. Turn the ignition switch to the ACC or ON position.
2. Push and hold the **H** (hours) button to the correct hour.
3. Push and hold the **M** (minutes) button to the correct minute.



Push the **:00** button to zero out the minutes.

## SETTING YOUR CLOCK

(if equipped with Trip Computer)

1. Push the **"CLOCK"** button.
2. Push and hold the **H** (hours) button to the correct hour.
3. Push and hold the **M** (minutes) button to the correct minute.



## POWER ON

Push the Power/Volume dial to turn the audio system on.

## MEDIA SELECTION

**Radio:** Push FM or AM button to select the FM1, FM2, or AM band.

**CD:** Push the CD button to select the CD player which plays CDs, MP3s, and WMAs. See the Owner's Manual for complete details.

**Auxiliary Input:** Push the AUX button to select the auxiliary jack.

**Satellite Radio:** Push the SAT button for SIRIUS XM Radio®. If your vehicle is equipped with SIRIUS XM Radio® (satellite radio antenna on roof or trunk lid), your new Mazda includes a **free** introductory subscription with a limited term trial offer. Call 888-539-7474 to activate! See the Owner's Manual and/or dealer for details. Contact your Mazda dealer about adding SIRIUS XM Radio® if your MAZDA6 is not already equipped with it.

## TUNING

**Manual:** Turn the TUNE dial to manually change the frequency.

**Seek:** Push the TRACK/SEEK  $\Delta$   $\nabla$  tuning buttons to automatically seek a higher or lower frequency with a station.

**Scan:** Push the SCAN button to automatically sample strong stations for seconds each. Push again to cancel.

**Preset Channel:** Push the Preset Channel buttons (1-6) to select a station stored in memory. To store a station, push and hold a button (1-6) until a beep is heard.

**Category (SIRIUS XM Radio® only):** Push the DISC/FOLDER  $\nabla$   $\Delta$  to change to a different category.

**Auto Memory Tuning:** Push the AUTO-M button to store an additional 6 stations on each FM and AM band without disturbing the previously stored stations. To return to previously stored stations, push the FM or AM button. Refer to the Owner's Manual for complete details.

## LOADING A CD

### Single CD Player

- Insert the CD into the slot, label-side up.

### In-Dash CD Changer

- Push the LOAD button and when "Please Insert a Disc" is displayed, insert the CD.

## PLAYING A CD

- Push DISC/FOLDER  $\nabla$   $\Delta$  to select a CD (6 CD changer).
- Push DISC/FOLDER  $\nabla$   $\Delta$  to select a folder (MP3/WMA).
- Push TRACK/SEEK  $\nabla$   $\Delta$  to select previous or next track.
- Push DISC/FOLDER  $\nabla$   $\Delta$  to select previous or next folder (for MP3s and WMAs).

## PLAYING BLUETOOTH® (BT) AUDIO

- 1 Make sure BT audio device is paired.
- 2 Turn on BT audio device.
- 3 Push the AUX button until "BT AUDIO" is displayed.

## BLUETOOTH® AUDIO

Bluetooth® enabled phones and audio players provide an opportunity to play music through the audio system with no wires attached, however, there are some limitations:

- During playback, the song title or artist will be shown on the vehicle's information display. (This may vary due to the specification of your phone or player (AVRCP 1.3 required). To obtain further information, please refer to the Owner's Manual). This is not a problem with the vehicle, phone, or player. The current audio profile does not send this information.
- Not all controls on the phone or player will be active when paired to the vehicle.
- Wi-Fi signal strength can affect audio streaming.
- Sound quality of streaming audio varies depending on the device.

## SETTING YOUR CLOCK

- Push the **H** button to set the hour.
  - Push the **M** button to set the minutes.
- Push the **:00** button to reset clock to nearest hour.



**Selection Buttons 1-4**



**Selection Buttons 5-8**

## POWER ON

Push the Power/Volume dial to turn the audio system on.

## MEDIA SELECTION

**Radio:** Push FM/AM button to select the FM1, FM2, or AM band.

**CD:** Push the CD/AUX button to select the CD player which plays CDs, MP3s, and WMAs. See the Owner's Manual for complete details.

**Auxiliary Input:** Push the CD/AUX button to select the auxiliary jack.

**Satellite Radio:** Push the SIRIUS button for SIRIUS XM Radio®. If your vehicle is equipped with SIRIUS XM Radio® (satellite radio antenna on roof or trunk lid), your new Mazda includes a **free** introductory subscription with a limited term trial offer. Call 888-539-7474 to activate! See the Owner's Manual and/or dealer for details. Contact your Mazda dealer about adding SIRIUS XM Radio® if your MAZDA6 is not already equipped with it.

## TUNING

**Manual:** Turn the TUNE dial to manually change the frequency.

**Seek:** Push the SEEK ▲ or TRACK ▼ tuning buttons to automatically seek a higher or lower frequency with a station.

**Scan:** Push the SCAN button to automatically sample strong stations for seconds each. Push again to cancel.

**Preset Channel:** Push **Selection Button 2, 3, 4, 6, 7, or 8** to select a station stored in memory. To store a station, push and hold **Selection Button 2, 3, 4, 6, 7, or 8** until **station is displayed**.

**Category (SIRIUS XM Radio® only):** Push the CAT ▲ or FOLDER ▼ to change to a different category.

**Auto Memory Tuning:** Push and hold the AUTO-M button to store an additional 6 stations on each FM and AM band without disturbing the previously stored stations. To return to previously stored stations, push the FM or AM button. Refer to the Owner's Manual for complete details.

## LOADING A CD Single CD Player

- Insert the CD into the slot, label-side up.
- In-Dash CD Changer**
- Push the LOAD button and when "Please Insert a Disc" is displayed, insert the CD.

## PLAYING A CD

- Push a Selection button to select a CD (6 CD changer).
- Push CAT ▲ or FOLDER ▼ to select a folder (MP3/WMA).
- Push SEEK ▲ or TRACK ▼ to select previous or next track.
- Push CAT ▲ or FOLDER ▼ to select previous or next folder (for MP3s and WMAs).

## PLAYING BLUETOOTH® (BT) AUDIO

- 1 Make sure BT audio device is paired.
- 2 Turn on BT audio device.
- 3 Push the CD/AUX button until "BT AUDIO" is displayed.

## BLUETOOTH® AUDIO

Bluetooth® enabled phones and audio players provide an opportunity to play music through the audio system with no wires attached, however, there are some limitations:

- During playback, the song title or artist will be shown on the vehicle's information display. (This may vary due to the specification of your phone or player (AVRCP 1.3 required). To obtain further information, please refer to the Owner's Manual). This is not a problem with the vehicle, phone, or player. The current audio profile does not send this information.
- Not all controls on the phone or player will be active when paired to the vehicle.
- Wi-Fi signal strength can affect audio streaming.
- Sound quality of streaming audio varies depending on the device.



## TO LOAD/PLAY A CD

1. Push **LOAD/▲**
2. Push the **LOAD** on-screen button lightly.
3. Wait for the screen to lower.
4. After "IN" is displayed on the Information Display, insert the CD.  
The CD will begin playing after the screen closes.



## SETTING YOUR CLOCK

1. Push the **MENU** button.
2. Select the Set Clock tab.
3. Choose a 24-hour display or a 12-hour display.
4. Use the + hour and - hour tabs to enter the correct hour.
5. Use the + min (minutes) and - min to set the correct minutes.
6. Exit by pushing the OK tab.

**NOTE:** Minutes and seconds are adjusted by the GPS; however, it is necessary to adjust hours under the following conditions:

- Driving across different time zones
- Daylight saving time start and end

## POWER ON

Push the Power/Volume dial to turn the audio system on.

## MEDIA SELECTION

Push the SOURCE button to select the appropriate on-screen button:

**Radio:** Select FM or AM button for FM1, FM2, or AM band. The selected band will be indicated in the Information Display.

**DISC:** Select for CD player.

**Satellite Radio:** Select SAT for SIRIUS XM Radio®. If your vehicle is equipped with SIRIUS XM Radio® (satellite radio antenna on roof or trunk lid), your new Mazda includes a **free** introductory subscription with a limited term trial offer. Call 888-539-7474 to activate! See the Owner's Manual and/or dealer for details. Contact your Mazda dealer about adding SIRIUS XM Radio® if your MAZDA6 is not already equipped with it.

**AUX:** Select to switch to AUX jack input.

**iPod:** Select to play iPod®.

**BT-Audio:** Select for Bluetooth® Audio.

## TUNING

**Manual:** Turn the TUNE/AUDIO dial to manually change the frequency.

**Seek:** Push and hold the SEEK/TRACK buttons ▲ ▼ to automatically seek a higher or lower frequency or track, depending on media selected.

**NOTE:** If you continue to push and hold the button, the frequency will continue changing without stopping.

**Scan:** Push the SCAN button to automatically sample strong stations for seconds each. Push again to cancel.

## Auto Memory Tuning:

Select and hold the AUTO-M on-screen button until beep is heard to store an additional 8 stations on each FM and AM band without disturbing the previously stored stations. To return to previously

stored stations, select the FM or AM on-screen button. Refer to the Owner's Manual for complete details.

**Preset Channel:** Can be used to store 8 AM, 16 FM and 24 SIRIUS XM Radio® stations.

- 1 To set a channel, first select AM, FM1, FM2, SAT1, SAT2 or SAT3.
  - 2 Tune to the desired station.
  - 3 Push the TUNE AUDIO dial.
  - 4 Select and hold any channel preset on-screen button for about two seconds until a beep is heard.
- Repeat to store other stations.

## PLAYING BLUETOOTH® (BT) AUDIO

- 1 Make sure BT audio device is paired.
- 2 Turn on BT audio device.
- 3 Push the Source button.
- 4 Select the BT-Audio option.

 
## BLUETOOTH® AUDIO

Bluetooth® enabled phones and audio players provide an opportunity to play music through the audio system with no wires attached, however, there are some limitations:

- During playback, the song title or artist will be shown on the vehicle's information display. (This may vary due to the specification of your phone or player (AVRCP 1.3 required). To obtain further information, please refer to the Owner's Manual). This is not a problem with the vehicle, phone, or player. The current audio profile does not send this information.
- Not all controls on the phone or player will be active when paired to the vehicle.
- Wi-Fi signal strength can affect audio streaming.
- Sound quality of streaming audio varies depending on the device.



## INSERTING THE MAP DISC:

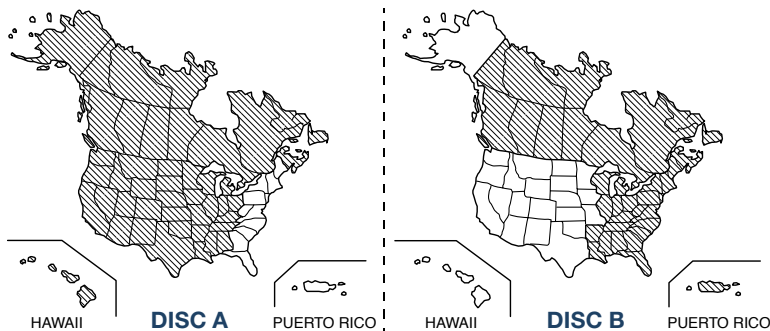

Your navigation system operates using the Map Discs supplied.

- **Disc A** covers most of the Midwest and Western states including Hawaii and Alaska.
- **Disc B** covers some of the Midwest and all of the Eastern states including Puerto Rico.
- Both discs cover all of Canada.

**NOTE:** If the state your address is in is not displayed when entering a destination, you may have the wrong disc in the navigation system.

- 1 Push **[LOAD]**.
- 2 When "Load/Eject" screen appears, select "MAP". Wait for navigation screen to tilt open.
- 3 Remove current Map Disc (if installed) and insert the desired Map Disc, with the printed side facing up, into the lower DVD MAP slot.
- 4 Read the Caution carefully and select the "AGREE" on-screen button.

## SELECTING A DESTINATION

You can choose setting a destination using a street address, point of interest, emergency, memory point, home, preset destination, previous destination, freeway on/off ramp, coordinates, or select from map.

- 1 Push "MENU" button on navigation face.
- 2 Select "Destination Entry".
- 3 Select "Address".
- 4 Select the "State" or "Province".
  - Scroll down past the States to find Canadian Provinces.
- 5 Select "OK".
- 6 Select "City".
- 7 Select "Input City Name".
- 8 Use the keyboard to enter the city name.
- 9 Select "Street".
- 10 Use the keyboard to enter the street name.
- 11 Select "House No".
- 12 Use the keyboard to enter the house number, then select "OK".
- 13 When the map appears, select "Destination".
- 14 Select "Guide" or just start driving.

### NOTE:

- For safety reasons, some navigation functions cannot be performed via the Navigation screen while driving.
- When entering numbers for a street name, (e.g., 1st Ave.), push "Sym." button to switch to the numeric keyboard.
- **Map Orientation:** "North Up" - Geographic north is up.  
"Head Up" - The direction you are heading is up.
- **Route Preferences:** Select "Prefer" or "Avoid" for toll roads, major roads, ferries, restricted roads and border crossing.
- **RETURN** button: Push button to return to the previous navigation screen.
- **VOICE** button: Push to replay a voice navigation assist from the navigation system.
- **DISP** button: Push to set screen angle, brightness, contrast, day/night screen and display on/off.

## SET HOME LOCATION

**NOTE:** Home address must be stored in ADDRESS BOOK before proceeding. Follow "SELECTING A DESTINATION" step 1-12 and on step 13 select "Memory Pt." instead of "Destination" to store address.


- 1 Push "MENU" button on navigation face.
- 2 Select "ADDRESS BOOK".
- 3 Select "Memory Points/Home".
- 4 Select "List".
- 5 Select home address from list.
- 6 Select "Category".
- 7 Select "Home".

## PAIRING YOUR BLUETOOTH® PHONE OR AUDIO DEVICE

### NOTE:

- For safety reasons, you cannot pair a phone while driving.
- Before pairing your cell phone or audio device, it is recommended that you refer to its manual for steps to turn on Bluetooth® and perform pairing.
- For toll-free Bluetooth® Hands-Free customer service and device compatibility call **800-430-0153** or go to **www.MazdaUSA.com/bluetooth** for assistance.
- **IMPORTANT:** Set the volume level on your cell phone or audio device to the highest level before distortion starts, then adjust the volume on the audio system.

### Voice Pairing

- 1 Push and release (wait for beep) the  button on the steering wheel.
- 2 From main menu, say, **"Setup, Pairing Options."**
- 3 Say, **"Pair."**
- 4 Say a four-digit code (i.e., "1, 2, 3, 4").
- 5 Place phone in discovery mode; if necessary, consult your phone's manual or go to [www.mazdausa.com/bluetooth](http://www.mazdausa.com/bluetooth). Select model, Bluetooth, and follow screen prompts.
- 6 After phone is recognized, you will be prompted to name the paired phone.
- 7 Pairing completed.


### Pairing with Navigation


- 1 Push **SOURCE** button next to Navigation screen.
- 2 Select **BT-Audio** on Navigation screen.
- 3 Select **Settings**.
- 4 Select **Pair/Select Device**.
- 5 Select **Add New**.
- 6 System will provide a four-digit code.
- 7 Use the four-digit code to begin the pairing procedure; if necessary, consult your phone's manual or go to [www.mazdausa.com/bluetooth](http://www.mazdausa.com/bluetooth). Select model, Bluetooth, and follow screen prompts.
- 8 Pairing completed.

 
**NOTE:** If your compatible Bluetooth® phone is equipped with a music player and supports the Bluetooth® profile A2DP, your phone will pair for both hands-free calling as well as Bluetooth® audio during the pairing process, and will be considered one unit. Please refer to your Owner's Manual for complete details on how to "pair" up to 7 Bluetooth® phones and audio devices, and how to use the built-in tutorial and other important safety information.

## TO MAKE OR RECEIVE A HANDS-FREE CALL

### Basic Operation:

 **button:** To make/receive/swap (during call interruption) a call.

 **button:** To end/reject a call.

 **button:** To skip voice guidance (for speeding up your operation).

**Auto Re-connect:** On engine start, the last-connected device will be automatically re-connected. The system is operable several seconds after engine start.

### When using Bluetooth® audio function:

The sound quality of Bluetooth® streaming audio varies depending on the device, even when recorded with a recommended bit rate of 128 kbps.



## MYMAZDA.COM —THE OFFICIAL SITE FOR MAZDA OWNERS

Register today on MyMazda.com —the ultimate destination for Mazda Owners. Once registered, you'll be able to take advantage of benefits exclusively for Mazda Owners:

- Insider access to exclusive events and promotions
- Personalized maintenance schedules
- Zoom-Zoom Owner Magazine
- Warranty information and on-line Owner's Manuals
- Wallpaper, videos and other fun stuff
- Accessories specifically designed for your vehicle
- Car Care Discount Coupons available from your Mazda Dealer

Visit and register at MyMazda.com today!

**Roadside assistance is available 24 hours a day, 365 days a year. Using the toll free phone number or iPhone® app (which uses GPS-enabled technology to determine your exact location), will put you in touch with a roadside assistance agent.**

Phone: 1-800-866-1998

The app can be downloaded, free of charge, by logging onto <http://mazda.crosscountry-auto.com/> or directly from App store on your iPhone or your PC using iTunes. After downloading app, customer name, email, iPhone number and VIN are required.

## GENUINE MAZDA ACCESSORIES

Genuine Mazda Accessories are built to the same standards of quality as your Mazda. That means they fit right, work right, and look great. Choose from a wide range of interior and exterior accessories to make your MAZDA6 fit your personality and lifestyle. After all, you are what you drive.

**Personalize your MAZDA6 with the following Genuine Mazda Accessories:**

- 3.5 mm Audio Cable
- All-Weather Floor Mats
- Auto-Dimming Rearview Mirror with Compass and HomeLink®
- Bluetooth® Car Kit by Motorola
- Car Cover
- Car Cover Cable Lock
- Cargo Mat
- Cargo Net
- Cargo Tray
- Door Sill Trim Plates
- First Aid Kit
- Fog Lights
- Front Mask
- Fuel-Filler Door
- In-Dash 6-Disc CD/MP3 Player
- iPod® Integration
- License Plate Frames
- Moonroof Wind Deflector
- Portable Navigation Devices by Garmin®
- Rear Bumper Guard
- Remote Engine Start
- Roadside Assistance Kit
- SIRIUS Satellite Radio
- Splash Guards (Front and Rear)
- Spoiler
- Touch-up Paint
- Wheel Locks
- Windshield Sunscreen

# Customer Delivery Checklist

## VEHICLE PRESENTATION:

*Refer to Smart Start Guide during presentation*

### ☐ Keyless Entry ..... 1



- Smart Entry (Advanced Key\*)
- Door Request Switch\*
- Trunk Request Switch\*
- Power Door Locks

### ☐ Starting the Engine\* ..... 2



- Push Button Ignition
- Emergency Engine Stop

### ☐ Seat Adjustments\* ..... 3

### ☐ Fuel Door ..... 4

- Fuel Door Release and Fuel Spec

### ☐ Aluminum Wheel Care ..... 4

### ☐ Driver's View ..... 5-6

- Location of Switches and Controls

### ☐ Instrument Cluster ..... 7-8

- Review indicator light function and location

### ☐ Lighting Control ..... 9

### ☐ Wiper Washer ..... 10

### ☐ Auto-Dimming Mirrors\* ..... 12

### ☐ Blind Spot Monitoring\* ..... 13

### ☐ AUX Input ..... 14

**All items in the Customer Delivery Checklist have been reviewed with the customer and the first maintenance appointment has been scheduled:** *\*if equipped*

SALES CONSULTANT	DATE	CUSTOMER	DATE

*Signed copy must be placed in dealer jacket*

### ☐ Climate Control ..... 15-16



- Manual Mode
- Auto Mode\*

### ☐ Audio Controls ..... 17-22

- SIRIUS XM Radio®\* Operation and Activation

### ☐ Set Clock ..... 17-19, 22

### ☐ Navigation System\* ..... 23-24

- Inserting the Map Disc
- Selecting a Destination
- Set Home Location

### ☐ Bluetooth® Hands-Free\* ..... 25

- Tutorial
- Pair Phone
- Make a Call
- Toll-Free Customer Service

**800-430-0153**

### ☐ Tutorial Videos on MyMazda.com ..... Inside Back Cover

## SCHEDULED MAINTENANCE (2.5L Engine Only)

When replacing or topping off engine oil, use Mazda Genuine oil. For optimal engine performance, use SAE 0W-20 engine oil. Please consult an Authorized Mazda Dealer for additional information.

# Customer Delivery Checklist

DEALERSHIP	DATE
SALES CONSULTANT	CUSTOMER'S NAME
VIN	E-MAIL

## PRESENTATION OF OWNER'S MATERIALS:

*Review the following items with the customer*

### ☐ Smart Start Guide

- Remove this checklist from Smart Start Guide
- Personalization Features (refer to your Owner's Manual)

### ☐ MyMazda.com

- Offer to register customer on MyMazda.com

### ☐ Owner's Manual

### ☐ Warranty Information

**Warranty Start Date:** \_\_\_\_\_

**Customer Initial:** \_\_\_\_\_

- Basic Vehicle – 36 months/36,000 miles
- Roadside assistance program

### ☐ Floor Mats

- Ensure floor mats are properly hooked after cleaning
- Do not install two floor mats, one on top of the other, on the driver side

## SERVICE DEPARTMENT

- ☐ Introduce Service Manager; provide business cards
- ☐ Review Service and Parts Department hours of operation
- ☐ Explain free Full Circle Service Inspection
- ☐ Schedule first maintenance service



## GENUINE MAZDA SERVICE

***Because you and your Mazda deserve the best***

Your new Mazda deserves nothing less than the very best. To keep it running like new for years to come, trust the experts at your local Authorized Mazda Dealer. Simply bring your vehicle in for your scheduled maintenance and any needed repairs.\*

At participating Mazda Full Circle Service Centers,\*\* our technicians will automatically perform a complimentary Full Circle inspection on your vehicle and issue a detailed report card at every visit. This is designed to help you keep track of your Mazda's critical operating condition. Our factory-trained technicians know your vehicle inside out and use Genuine Mazda Parts, giving your vehicle the optimum care and maintenance it requires to run with flawless precision.

Remember, to further enhance your driving experience, visit your local Mazda Service Center for your scheduled maintenance. It's also the place where you can find a wide variety of tires, parts, and accessories that are just right for your vehicle.

**\* See vehicle's scheduled-maintenance program for details.**

**\*\* Visit the Mazda Owners website at [MyMazda.com/fullcircle](http://MyMazda.com/fullcircle) to find a participating Mazda Full Circle Service Dealer.**

**Customer Assistance Center: 1-800-222-5500**

**Roadside Assistance Contact: 1-800-866-1998**

*Mazda*  
**FULL CIRCLE**  
*SERVICE*

### FREE FULL CIRCLE SERVICE INSPECTION

***We're committed to providing  
expert Mazda service.***

You love to drive your Mazda, and we love to service your Mazda. With our Full Circle Service, we'll give your vehicle a **COMPLIMENTARY MULTI-POINT INSPECTION**. Your Mazda will receive a thorough review of its most crucial components.

This easy-to-use Smart Start Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. Mazda reserves the right to change specifications or design without obligation.

© Mazda North American Operations  
Printed in U.S.A. 10/10  
Print 2  
9999 95 078C 11SS



**[www.MazdaUSA.com](http://www.MazdaUSA.com)**