

Key

Information Display





KEYLESS ENTRY SYSTEM

This system remotely locks and unlocks the doors and the liftgate.

Lock Release Button · Push to extend key. Push once to lock all doors and liftgate. · Push and fold to • Push twice (within retract key. five seconds) for horn sound verification that all doors are locked. Unlock **Panic Alarm** · Push once to Push for one second or unlock driver's door. more to activate alarm. Push twice (within five) · Push Lock, Unlock, seconds) to unlock all or Panic Alarm to doors and liftgate. turn alarm off. **Retractable Key**

LIFTGATE

Grasp the lower end of the liftgate and push the electric liftgate opener button on the liftgate, when the latch releases, raise the liftgate. While the ignition is switched ON, the liftgate can be opened only when the vehicle is stopped with the parking brake applied (manual transaxle), or with the selector lever in the P position (automatic transaxle).

NOTE: When the liftgate opener switch is pushed, the liftgate will open slightly. If the liftgate is not opened within 1.5 seconds, the liftgate latch locks (you will hear it lock) and the liftgate cannot be opened or closed from this slightly raised position. To open/close the liftgate, push the liftgate opener switch, open the liftgate within 1.5 seconds, then close it. The door/liftgate ajar warning light will be on if the liftgate is not fully closed.



INFO

Push INFO button on steering wheel to display the following (actual displayed information will vary on your vehicle):



GENUINE MAZDA ACCESSORIES

Genuine Mazda Accessories are built to the same standards of quality as your Mazda. That means they fit right, work right, and look great. Choose from a wide range of interior and exterior accessories to make your MAZDA5 fit your personality and lifestyle. After all, you are what you drive.

Personalize your MAZDA5 with the following Genuine Mazda Accessories:

- 3.5 mm Audio Cable
- 6-Disc CD/MP3 Changer
- All-Weather Floor Mats
- Auto-Dimmina Rearview Mirror with Compass
- and HomeLink® Bluetooth® Car Kit by Motorola
- Cargo Net

- DVD Entertainment System
- Expandable Cargo Tote
- Fog Lights
- iPod® Integration
- License Plate Frame
- Moonroof Wind Deflector
- Portable Navigation Devices by Garmin®
- Rear Bumper Guard

- Remote Engine Start
- Retractable
- Cargo Cover Roof Rack
- and Attachments SIRIUS Satellite Radio
- Soft Cargo Liner
- Splash Guards
- Tailpipe Finisher
- Touch-Up Paint
- Wheel Locks

Seat Controls and Storage





SEAT CONTROLS

Recline Lever

Pull up to adjust seatback angle.

Lumbar Adjustment

Lumbar can be changed by pulling the lumbar lever forward to adjust the lumbar support. \

Height Adjustment Lever

Raise or lower seat height by repeatedly pulling up or pushing down on the lever.



Slide Release Lever

Pull lever up to move seat backward or forward.



FUEL DOOR RELEASE

(located on floor next to driver's seat)

To open, pull the fuel door release.

NOTE: Fuel requirement 87 Octane.



Fuel Door

To avoid scratching the paint during refueling, secure the fuel filler cap tether over the hook as shown.



Split-Folding Third-Row Seatback

- To create a flat luggage compartment space, lower the head restraints all the way down, pull the release strap, then fold the seatbacks forward.
- To return the seatbacks to the original position, pull the release strap.



Second Row Seat Storage/Flip Out Center Console

- Pull up on the strap on either seat to lift the seat bottom and you'll find convenient space to store small items and a console in the right side seat that flips out.
- When returning the seat bottom into place, make sure it locks into position by attempting to move it up and down.

NOTE: The second row seats are equipped with foldable head restraints. To fold the head restraint, pull the strap on the back of the head restraint and fold the head restraint downward. To return the head restraint to its upright position, lift it upward.



Center Console Storage Recline Lever

To fold the second row seats flat:

Strap

- 1 Slide the seat all the way back.
- 2 Lift up the seat bottom.



- 3 Fold the head restraint downward.
- **4** Fold down the seatback using the recline lever.

ď

















HEADLIGHT LEVELING

LIGHTING/ **TURN SIGNALS** (P. 9)

BLUETOOTH® & AUDIO

CRUISE CONTROL **INFORMATION DISPLAY**

(PP. 2, 13-16)

THE WAY FRICKS 1851 EEE

PASSENGER AIRBAG OFF INDICATOR¹

HAZARD WARNING

(P. 15)

AUDIO CLOCK SYSTEM (PP. 15-16)



















HOOD **RELEASE**

TILT/TELESCOPING STEERING WHEEL **LEVER**

WIPER/ WASHER (P. 10)

CLIMATE CONTROL (PP. 13-14)

SPORT A/T (P. 11)

SEAT WARMER (LOCATED ON CENTER CONSOLE)



belt pretensioner will not deploy during a collision. The reason for this is that the weight in the seat is less than approximately 66 lbs. Always wear your seat belt and secure children in the rear seats in AIRBAG OFF appropriate child restraints. See the Owner's Manual for important information on this safety feature. belt pretensioner will not deploy during a collision. The reason for this is that the weight in the seat is

This indicator light illuminates to remind you that the front passenger's front/side airbags and seat





INSTRUMENT CLUSTER DIMMER¹ **TACHOMETER**

FUEL GAUGE

SHIFT LEVER **POSITION INDICATOR** SPEEDOMETER

TRIP METER

SELECTOR²

GLOSSARY OF WARNING AND INDICATOR LIGHTS

NOTE: See Owner's Manual for more details and explanations



Check Fuel Cap



Check Engine Light



ABS (Antilock Brake System) Malfunction



Power Steering Malfunction

Tire Pressure



Lights On (Exterior)



Monitoring System (TPMS) **Warning Light** On/Warning Beep: Low tire pressure in one or more tires.



Low Fuel Level

ENGINE COOLANT TEMP LIGHTS

Since this vehicle does not use an engine coolant temperature gauge, red and blue engine coolant temperature lights are used to indicate high and low coolant temperature.



Red Coolant Temp Light

Flashing: Engine is starting to run hot. Drive slowly to reduce engine load. On: Engine is overheating. Safely pull over to the side of the road and turn the engine off. Refer to the Owner's Manual for more information.



1 • Rotate the knob to adjust the brightness of the instrument cluster and other dashboard illuminations.

Blue Coolant Temp Light

on: Engine coolant is cold and no warm air is available for heater/defroster. Off: Engine coolant is warm and warm air is available for heater/defroster. The light may stay on for a few minutes

after start-up when the engine is cold, but the vehicle can be driven with the light on or off.





Traction Control System (TCS)/Dynamic Stability Control (DSC)

On: TCS/DSC malfunction Flashing: TCS/DSC operating



Seat Belt Unbuckled/Malfunction



Automatic Transmission Malfunction



Door/Liftgate Ajar

Cruise Main Indicator Light On (AMBER)/ **Cruise Set Indicator** Light On (GREEN)



Headlight High Beams On



Airbag/Front Seat Belt Pretensioner System Malfunction



Low Engine Oil Pressure



Charging System Malfunction



Security Indicator Light



Brake Warning Light

Parking brake on/low brake fluid/malfunction



Dynamic Stability Control (DSC)/Traction Control System (TCS) Off **Indicator Light**

DSC OFF switch pushed and TCS/DSC turned off.

NOTE: Low ambient temperature and/or high altitude causes tire pressures to drop and may turn the TPMS warning light on. If the warning light comes on, check the tire pressure and fill the tires as soon as possible, preferably before moving the vehicle and warming up the tires. Tire pressure should be checked when the tires are cold.

. When a trip meter is selected, push and hold to reset to zero.

² • Push to togale between trip meter (A & B).







283163 12a Mazda5 SSG 110410.indd 8-9 11/4/10 11:52 AM



LIGHTING CONTROL/TURN SIGNAL LEVER

-DO-: Turns tail, parking, and dashboard lights on.

AUTO: The light sensor automatically determines when to turn the headlights on or off.

±0: Turns fog lights on only when headlights are on.



WINDSHIELD/REAR WINDOW WIPER/WASHER CONTROL LEVER

AUTO: The rain sensor senses the amount of rainfall and turns the wipers on or off. Rotate inner ring away from you (clockwise) for less sensitivity (requires more rain to turn wipers on) and towards you (counterclockwise) for more sensitivity (requires less rain to turn wipers on).



Turns tail, parking, dashboard, and headlights on.

HEADLIGHT LEVELING

Adjust headlight angle with headlight leveling switch depending on vehicle passengers & load (example: Driver only

= 0, Driver + Passengers = 1 or 2, etc.). Refer to your Owner's Manual for complete details.



INT: Intermittent ON: Normal speed

Washer/wiper (hold as desired)

NOTE: Vehicles not equipped with AUTO wipers will have INT wipers. Set the lever to INT and choose an interval timing by rotating the ring between fast and slow.

CAUTION: When the ignition is ON turn the AUTO wipers OFF when going through a car wash, or while cleaning or touching the windshield.















SPORT A/T MANUAL SHIFT MODE

The Sport A/T Manual Shift Mode gives you the feel of driving a manual transmission by allowing you to manually shift to control engine rpm and torque when more control is desired.

To Use Manual Shift Mode:

Shift the lever from D to M.


NOTE: Changing to manual mode can be done while driving the vehicle.

To Shift Up To A Higher Gear:

• Tap the shift lever back (+) once.

To Shift Down To A Lower Gear:

• Tap the shift lever forward (-) once.

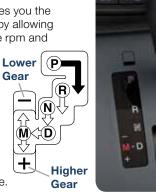



based of in a lower around of

The transmission will automatically adjust how and when it shifts gears based on road conditions and your driving style. The transmission may stay in a lower gear longer than usual when going up or down hills or driving around corners. This feature gives you better control and a more connected driving experience.



6-SPEED MANUAL TRANSMISSION

- Push the clutch pedal completely down to start the engine and to shift gears.
- To place the transmission in Reverse, place shifter in the neutral position, push the shifter knob down, move to the left and push forward.



ALUMINUM WHEEL CARE

Your aluminum wheels have a protective coating on them. Only use a mild soap or neutral detergent with a sponge or soft cloth to clean them. Using a wire brush, polishing compound, solvent, or any type of abrasive cleaner may damage the protective coating.

PORTABLE AUDIO PLAYER INTEGRATION USING THE AUX JACK

Your vehicle is equipped with an AUX or auxiliary jack that will allow you to play your portable audio player through the vehicle's audio system. Learn the system when parked and do not let it distract you while driving.



NOTE: Available at your Mazda dealer is the Genuine Mazda Accessory 3.5 mm audio cable which can be used to connect your portable audio player into the aux jack.

- 1 Locate the AUX jack inside the center console.
- 2 Plug 3.5 mm audio cable into the portable audio player and into the AUX jack. Turn portable audio player on.
- 3 Turn the vehicle audio system on.
- 4 Push the AUX button on the audio face **OR** the MODE button on the steering wheel controls.
- **5** Use the portable audio player controls to play music.

IMPORTANT: Set the volume level on your portable audio player to the highest level before distortion starts, then adjust the volume on the audio system.



Genuine Mazda Accessory Wheel Locks are available at your Mazda dealer



Ĭ,















12







Temperature Control Dial

AUTO ON: Push dial to turn Automatic Air Conditioning system on. Rotate dial to select your desired set temperature (shown in Information Display above). The airflow mode and the amount of airflow will be automatically controlled in accordance with the set temperature.



Push to recirculate cabin air to reduce outside odors and improve cooling (indicator on) or receive fresh air (indicator off).

Mode Selector

MODE

Push to select the following airflow mode:



Dashboard vents



Dashboard and floor vents



Floor vents



Defroster and floor vents



Windshield defroster



Push to defrost the windshield.



Push to defrost the rear window.

SREAR Push to turn rear vent system on or off.

Fan Control Dial

- · Rotate the dial to select the desired fan speed.
- · Push OFF to turn climate control system off.

A/C Push to manually turn air conditioning on or off.

NOTE: Automatic climate control will allow you to maintain a preset cabin temperature.



The heater and defroster work best when the blue coolant temperature light in the instrument cluster is off.

NOTE:

- Rotating the fan control dial, or pushing the MODE button, A/C switch, or windshield defroster switch while in AUTO ON mode will cancel auto A/C.
- With any defroster mode, the system turns on the A/C compressor and selects the FRESH AIR mode. This helps defrost the windows more efficiently by dehumidifying the air. The A/C compressor will always be on in defroster mode, but the defroster (and floor) will deliver warm air when the temperature dial is set to a warmer temperature and the engine warms up.

REAR VENT SYSTEM

- 1 Turn the front air conditioning system on (AUTO or manually).
- 2 Push the rear ventilation control switch SREAR located on the front climate control panel, or push either the low or high rear vent button on the rear console (indicator light will illuminate).



Low speed cool or cold air only from vents.

High speed cool or cold air only from vents.

NOTE: Only cool or cold air (no heat) blows through the rear vents while the front climate control is on. Heat for the rear passengers comes from under the front seats when the front heater is on and set to floor mode. When pushing the rear ventilation control switch on the front control panel (with climate control system on), the rear ventilation system operates at low speed only. To change to high speed, push the HI rear vent button.

NOTE: The displayed outside ambient temperature may vary from the actual ambient temperature depending on the surrounding area and vehicle conditions. The best time to read the ambient temperature is when the vehicle is moving at a steady rate of speed and not when moving slow in traffic.















13

283163 12a Mazda5 SSG 110410.indd 14-15







POWER ON

Push the VOL/POWER dial to turn the audio system on.

MEDIA SELECTION

Radio: Push FM/AM button to select the FM1, FM2, or AM band.

Satellite Radio: Push the SIRIUS button for SIRIUS XM Radio®. If your vehicle is equipped with SIRIUS XM Radio® (satellite radio antenna on roof or trunk lid), your new Mazda includes a **free** introductory subscription with a limited term trial offer. Call 888-539-7474 to activate! See the Owner's Manual and/or dealer for details. Contact your Mazda dealer about adding SIRIUS XM Radio® if your MAZDA5 is not already equipped with it.

CD: Push the CD button to select the CD player which plays CDs, MP3s, and WMAs. See the Owner's Manual for complete details.

Auxiliary Input: Push the AUX button to select the auxiliary lack.

TUNING

Manual: Turn the TUNE dial to manually change the frequency.

Seek: Push the SEEK/TRACK tuning buttons ▲▼ to automatically seek a higher or lower frequency with a station.

Scan: Push the SCAN button to automatically sample strong stations for a few seconds each. Push again to cancel.

Preset Channel: Push the Preset Channel buttons (1-6) to select a station stored in memory. To store a station, push and hold a button (1-6) until a beep is heard.

Category (SIRIUS XM Radio® only): Push the CAT/FOLDER ▲▼ to change to a different category.

Auto Memory Tuning: Push and hold the AUTO-M button to store an additional 6 stations on each FM and AM band without disturbing the previously stored stations. To return to the previously stored stations, push FM/AM button. Refer to the Owner's Manual for complete details.

LOADING A CD

Single CD Player

• Insert CD, label-side up.

In-Dash CD Changer

• Push the LOAD button: when "IN" is displayed, insert CD.

PLAYING A CD

- Push CD button to play a CD when a CD is in the unit.
- Push DISC buttons ∧ ∨ to select a CD (6 CD changer) during playback.
- Push SEEK/TRACK tuning buttons ▲▼ to select previous or next track.
- Push CAT/FOLDER △▼ to select previous or next folder (for MP3s and WMAs).

PLAYING BLUETOOTH® (BT) AUDIO

- 1 Make sure BT audio device is paired.
- 2 Turn on BT audio device.
- 3 Push the AUX button until "BT AUDIO" is displayed.

 
BLUETOOTH® AUDIO

and audio players provide an opportunity to play music through the audio system with no wires attached, however, there are some limitations:

- During playback, the song title or artist will be shown on the vehicle's information display. (This may vary due to the specification of your phone or player (AVRCP 1.3 required). To obtain further information. please refer to the Owner's Manual). This is not a problem with the vehicle, phone, or does not send this information.
- or player will be active when
- Wi-Fi signal strength can affect audio streaming.

Bluetooth® enabled phones





 Sound quality of streaming audio varies depending on the device.





15

PAIRING YOUR BLUETOOTH® PHONE OR AUDIO DEVICE

NOTE:

- For safety reasons, you cannot pair a phone while driving.
- Before pairing your cell phone or audio device, it is recommended that you refer to its manual for steps to turn on Bluetooth® and perform pairing.
- For toll-free Bluetooth® Hands-Free customer service and device compatibility call 800-430-0153 or go to www.MazdaUSA.com/bluetooth for assistance.
- IMPORTANT: Set the volume level on your cell phone or audio device to the highest level before distortion starts, then adjust the volume on the audio system.
- 1 Push and release the
 or
 full button located on the steering wheel and wait for a beep.
- 2 After the beep say, "Set-up".
- 3 After the beep say, "Pairing options".
- 4 After the beep say, "Pair".
- **5** After the beep, say any 4-digit code.
- 6 Place phone or audio device in Discovery mode; if necessary, consult its manual, or go to www.mazdausa.com/bluetooth and select model, Bluetooth®, then follow screen prompts.
- 7 Input the 4-digit code you chose earlier.
- 8 After the phone or audio device is recognized, you will be prompted to name the paired device, such as "Tom's phone or player".
- 9 When paired, a symbol will be displayed in the information display a phone symbol for a phone and a music symbol for an audio device. If the symbol is not displayed, the Bluetooth® device is not paired.

NOTE: If your compatible Bluetooth® phone is equipped with a music player and supports the Bluetooth® profile A2DP, your phone will pair for both hands-free calling as well as Bluetooth® audio during the pairing process, and will be considered one unit. Please refer to your Owner's Manual for complete details on how to "pair" up to 7 Bluetooth® phones and audio devices, and how to use the built-in tutorial and other important safety information.

TO MAKE OR RECEIVE A HANDS-FREE CALL



button: To make/receive/swap a call.

button: To end/reject a call.

In button: To skip voice guidance (for speeding up operation).

NOTE: On engine start, the last connected device will automatically be re-connected after several seconds.





MYMAZDA.COM—THE OFFICIAL SITE FOR MAZDA OWNERS

Register today on MyMazda.com—the ultimate destination for Mazda Owners. Once registered, vou'll be able to take advantage of benefits exclusively for Mazda Owners:

- Insider access to exclusive events and promotions
- Personalized maintenance schedules
- Zoom-Zoom Owner Magazine
- Warranty information and on-line Owner's Manuals
- Wallpaper, videos and other fun stuff
- Accessories specifically designed for your vehicle
- Car Care Discount Coupons available from your Mazda Dealer

Visit and register at MyMazda.com today!

Roadside assistance is available 24 hours a day, 365 days a year. Using the toll free phone number or iPhone® app (which uses GPS-enabled technology to determine your exact location), will put you in touch with a roadside assistance agent.

Phone: 1-800-866-1998

The app can be downloaded, free of charge, by logging onto http://mazda.crosscountry-auto.com/ or directly from App store on your iPhone or your PC using iTunes. After downloading app, customer name, email, iPhone number and VIN are required.

Customer Delivery Checklist

Customer Delivery Checklist

VEHICLE PRESENTATION:

Refer to the Smart Start Guide during presentation

☐ Keyless Entry1
de de
☐ Liftgate2
Seats3 • Adjustment
Fuel Door3 • Fuel Door Release • Fuel Specifications
 Rear Seats
□ Driver's View5-6 • Location of Switches and Controls
■ Instrument Cluster7-8 • Review indicator light function and location
Lights9
☐ Wiper/Washer10

Aluminum Wheel Care	11
AUX Input	12
Climate Control13	-14



☐ Audio	Controls	15-16



	Divistantia	Hands-Free	
ш	Bluetootn	Hands-Free	 i

- Pair Phone Make a Call
- Toll-Free
- **Customer Service** 800-430-0153

SCHEDULED MAINTENANCE

When replacing or topping off engine oil, use Mazda Genuine oil. For optimal engine performance, use SAE 0W-20 engine oil. Please consult an Authorized Mazda Dealer for additional information.

*if equipped

All items in the Customer Delivery Checklist have been reviewed with the customer and the first maintenance appointment has been scheduled:

SALES CONSULTANT	DATE	CUSTOMER	DATE

Signed copy must be placed in dealer jacket

DEALERSHIP	DATE
SALES CONSULTANT	CUSTOMER'S NAME
VIN	E-MAIL

PRESENTATION OF OWNER'S MATERIALS:

Review the following items with the customer

☐ Smart Start Guide

- Remove this checklist from Smart Start Guide
- Personalization Features (refer to your Owner's Manual)

☐ Warranty Information

Warranty Start Date: Customer Initial:

- Basic Vehicle 36 months/36,000 miles
- Roadside assistance program

SERVICE DEPARTMENT

- ☐ Introduce Service Manager; provide business cards
- Review Service and Parts Department hours of operation
- Explain free Full Circle Service Inspection
- ☐ Schedule first maintenance service

☐ MyMazda.com

- Offer to register customer on MyMazda.com
- ☐ Owner's Manual

☐ Floor Mats

- Ensure floor mats are properly hooked after cleaning
- Do not install two floor mats, one on top of the other, on the driver side



283163 12a Mazda5 SSG 110410.indd 20-21 11/4/10 11:54 AM

GENUINE MAZDA SERVICE

Because you and your Mazda deserve the best

Your new Mazda deserves nothing less than the very best. To keep it running like new for years to come, trust the experts at your local Authorized Mazda Dealer. Simply bring your vehicle in for your scheduled maintenance and any needed repairs.*

At participating Mazda Full Circle Service Centers,** our technicians will automatically perform a complimentary Full Circle inspection on your vehicle and issue a detailed report card at every visit. This is designed to help you keep track of your Mazda's critical operating condition. Our factory-trained technicians know your vehicle inside out, and use Genuine Mazda Parts, giving your vehicle the optimum care and maintenance it requires to run with flawless precision.

Remember, to further enhance your driving experience, visit your local Mazda Service Center for your scheduled maintenance. It's also the place where you can find a wide variety of tires, parts, and accessories that are just right for your vehicle.

- * See vehicle's scheduled-maintenance program for details.
- ** Visit the Mazda Owners website at MyMazda.com/fullcircle to find a participating Mazda Full Circle Service Dealer.

Customer Assistance Center: 1-800-222-5500 Roadside Assistance Contact: 1-800-866-1998



FREE FULL CIRCLE SERVICE INSPECTION

We're committed to providing expert Mazda service.

You love to drive your Mazda, and we love to service your Mazda. With our Full Circle Service, we'll give your vehicle a **COMPLIMENTARY MULTI-POINT INSPECTION**. Your Mazda will receive a thorough review of its most crucial components.

This easy-to-use Smart Start Guide is intended to help you more fully appreciate some of the unique features and functions of your new vehicle. However, it is not intended to replace your Owner's Manual. The Owner's Manual contains more detailed information to help you better understand the important safety warnings, features, operation, and maintenance of your vehicle. All information, specifications, photographs and illustrations in this publication are those in effect at the time of printing. Mazda reserves the right to change specifications or design without obligation.

© Mazda North American Operations Printed in U.S.A. 10/10 Print 1 9999 95 005C 12SS



www.MazdaUSA.com